

Sound system , (8RY),(9VD),(EP1),(I8H)
from September 2014



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Digital sound system control module, Information electronics control module 1, Microphone unit in front roof module

- J285 Instrument cluster control module
- J525 Digital sound system control module
- J533 Data bus on board diagnostic interface
- J794 Information electronics control module 1
- R74 Interior microphone
- R164 Microphone unit in front roof module
- ST4 Fuse panel 4
- SF7 Fuse 7 (on fuse panel F)
- T2aq 2-pin connector
- T2bm 2-pin connector
- T2ca 2-pin connector
- T6e 6-pin connector
- T12d 12-pin connector
- T38 38-pin connector

50 Ground connection in luggage compartment, left


729 Ground connection on left rear wheel housing


B444 OBD connection 1 (in main wiring harness)

B607 Connection 3 (in interior wiring harness)

- * Only for vehicles with BOSE sound system
- *2 Refer to applicable wiring diagram for fuse positions
- *3 Refer to applicable wiring diagram for data bus networking
- *4 Fiber optic cable
- *5 Sedan
- *6 Avant


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

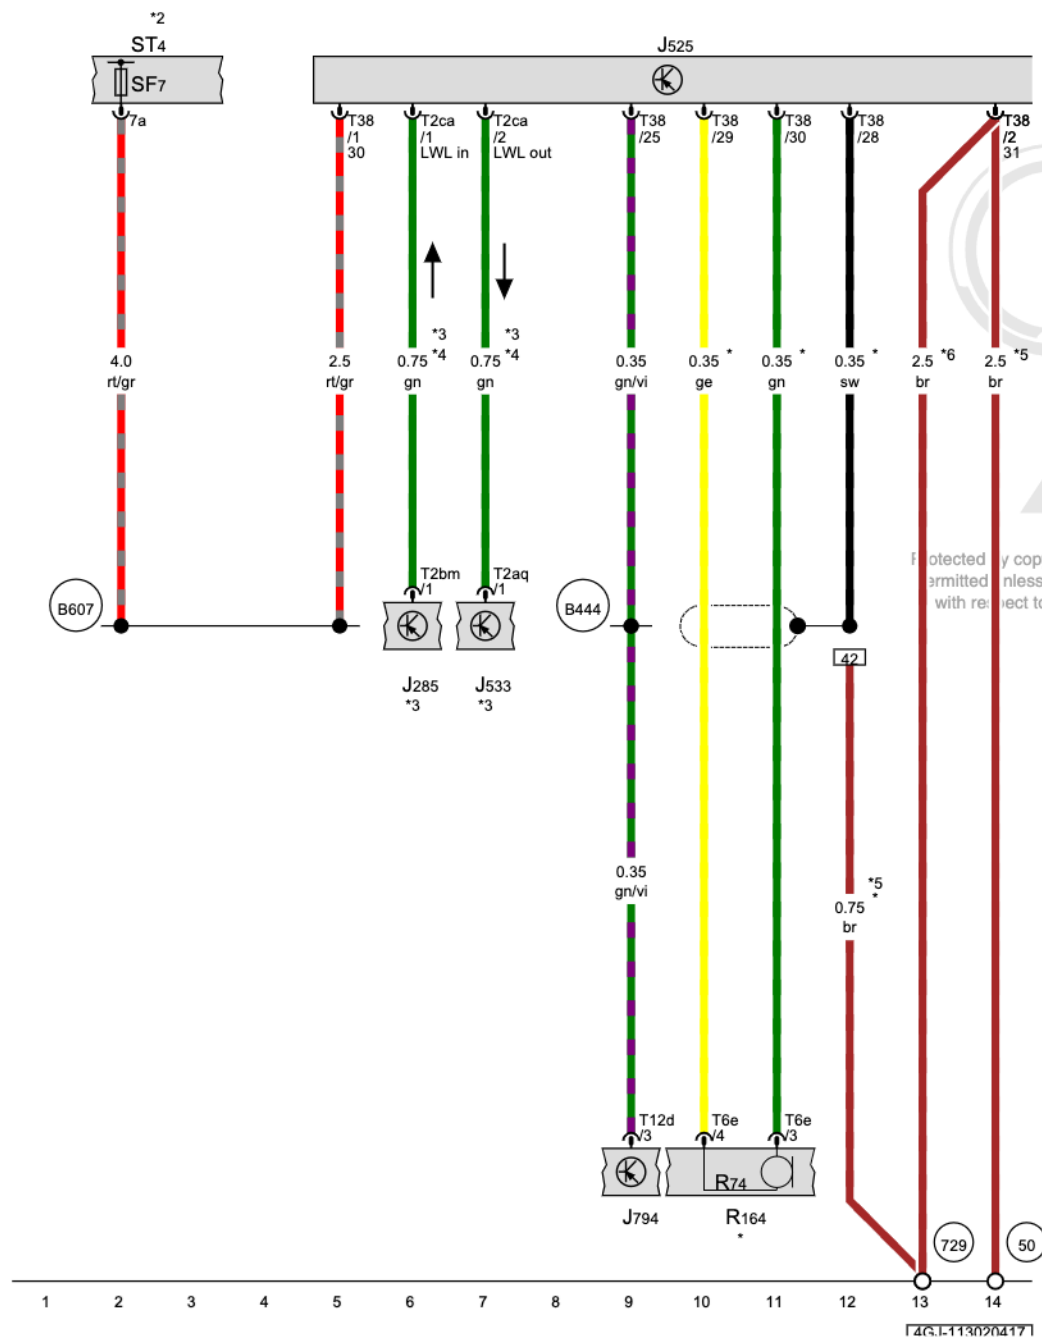

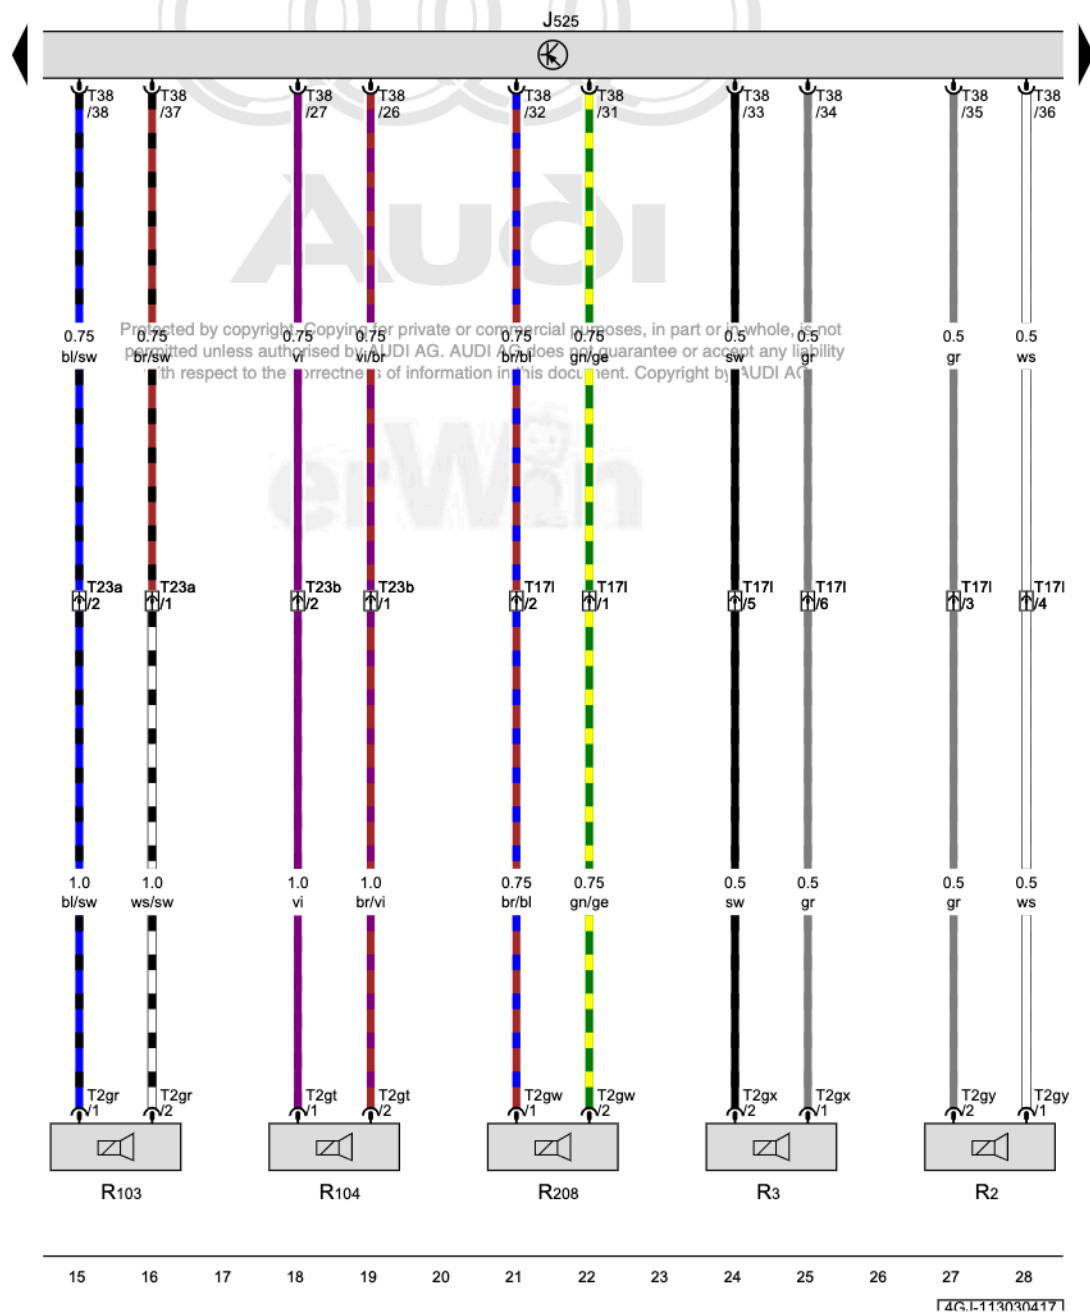

Digital sound system control module, Left front speaker, Right front midrange speaker, Center speaker

- J525 Digital sound system control module
- R2 Left front speaker
- R3 Right front speaker
- R103 Left front midrange speaker
- R104 Right front midrange speaker
- R208 Center speaker
- T2gr 2-pin connector
- T2gt 2-pin connector
- T2gw 2-pin connector
- T2gx 2-pin connector
- T2gy 2-pin connector
- T171 17-pin connector, in the left A-pillar connector station, gray
- T23a 23-pin connector, on the left A-pillar, black
- T23b 23-pin connector, on the right A-pillar, black
- T38 38-pin connector

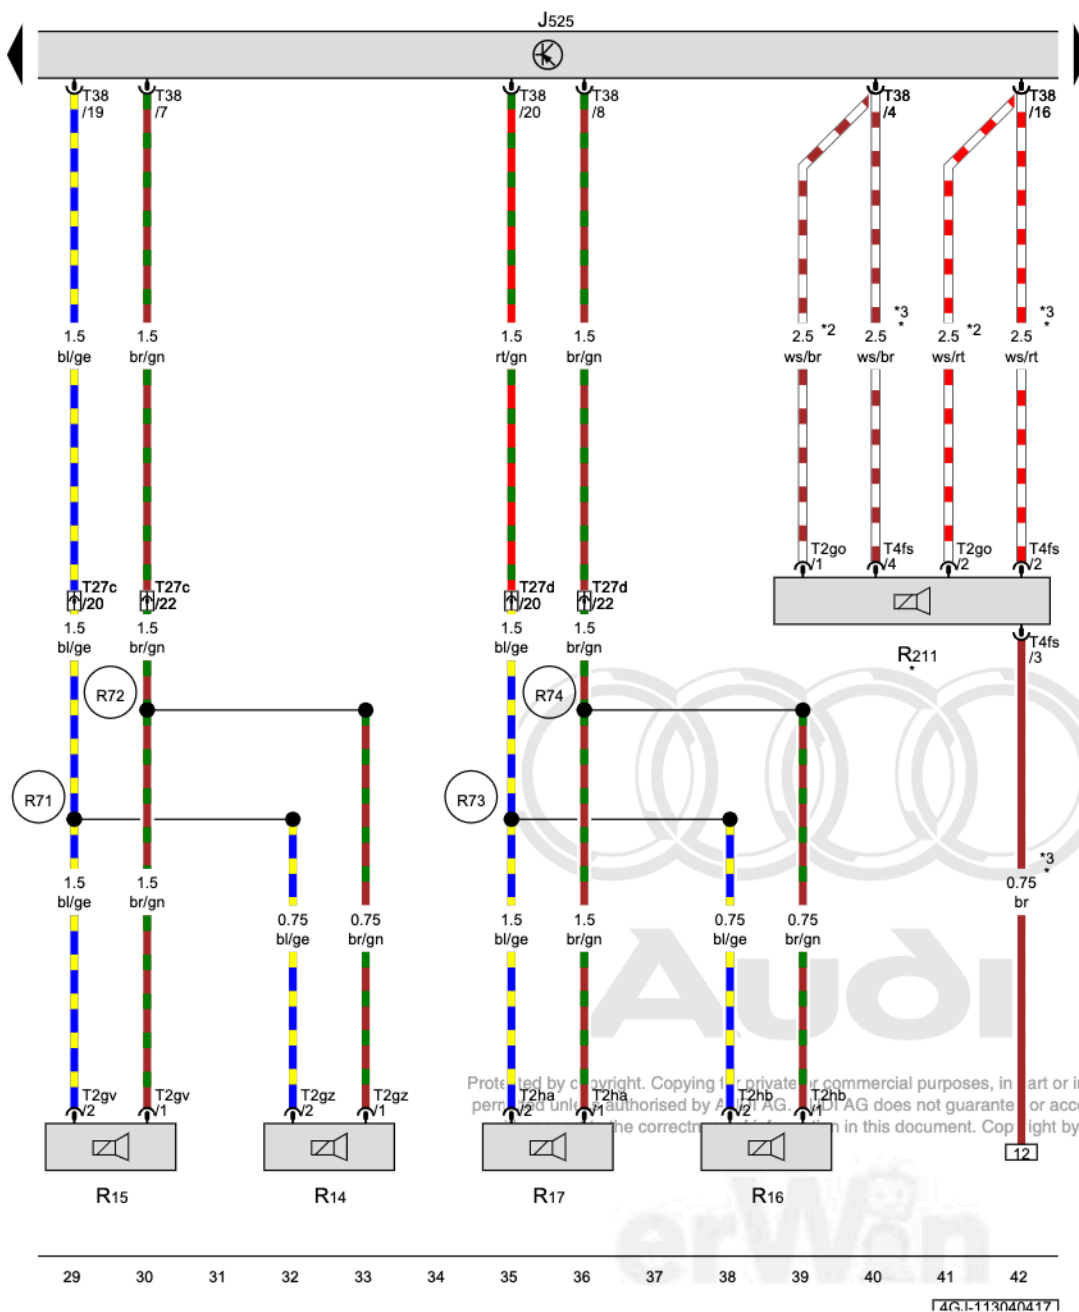

Digital sound system control module, Left rear treble speaker, Right rear bass speaker


- J525 Digital sound system control module
- R14 Left rear treble speaker
- R15 Left rear bass speaker
- R16 Right rear treble speaker
- R17 Right rear bass speaker
- R211 Subwoofer
- T2go 2-pin connector
- T2gv 2-pin connector
- T2gz 2-pin connector
- T2ha 2-pin connector
- T2hb 2-pin connector
- T4fs 4-pin connector
- T27c 27-pin connector, on the left B-pillar, black
- T27d 27-pin connector, on the right B-pillar, black
- T38 38-pin connector

- R71 Speaker positive connection (in left rear door wiring harness)
- R72 Speaker negative connection (in left rear door wiring harness)
- R73 Speaker positive connection (in right rear door wiring harness)
- R74 Speaker negative connection (in right rear door wiring harness)


- * Only for vehicles with BOSE sound system
- *2 Avant
- *3 Sedan

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Digital sound system control module, Left front bass speaker, Right front bass speaker, Right effects speaker

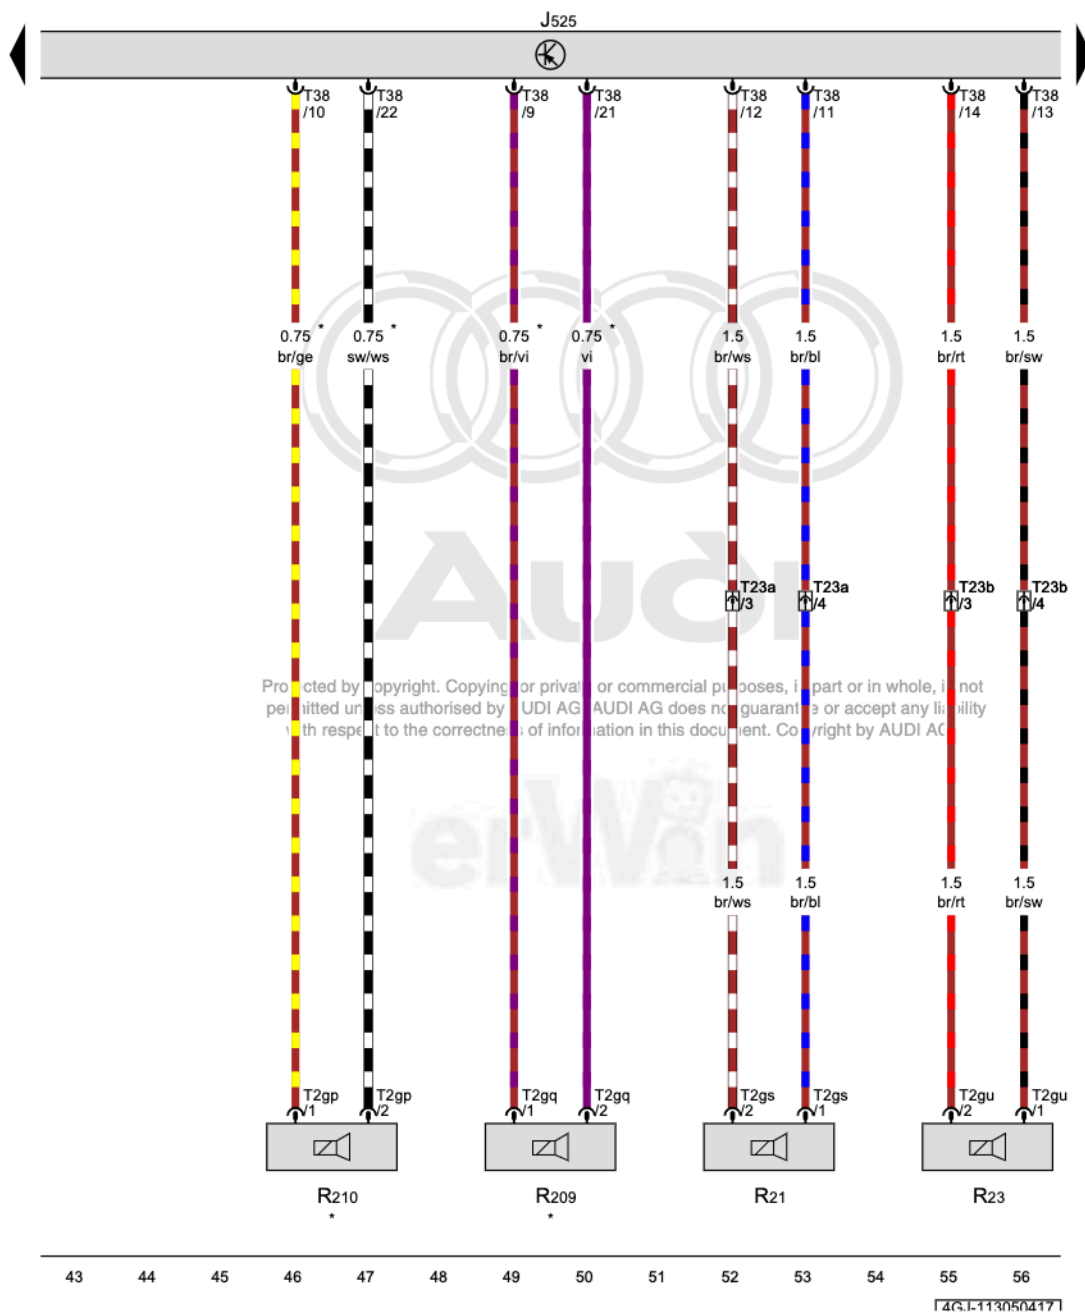

- J525 Digital sound system control module
- R21 Left front bass speaker
- R23 Right front bass speaker
- R209 Left effects speaker
- R210 Right effects speaker
- T2gp 2-pin connector
- T2gq 2-pin connector
- T2gs 2-pin connector
- T2gu 2-pin connector
- T23a 23-pin connector, on the left A-pillar, black
- T23b 23-pin connector, on the right A-pillar, black
- T38 38-pin connector
- * Only for vehicles with BOSE sound system

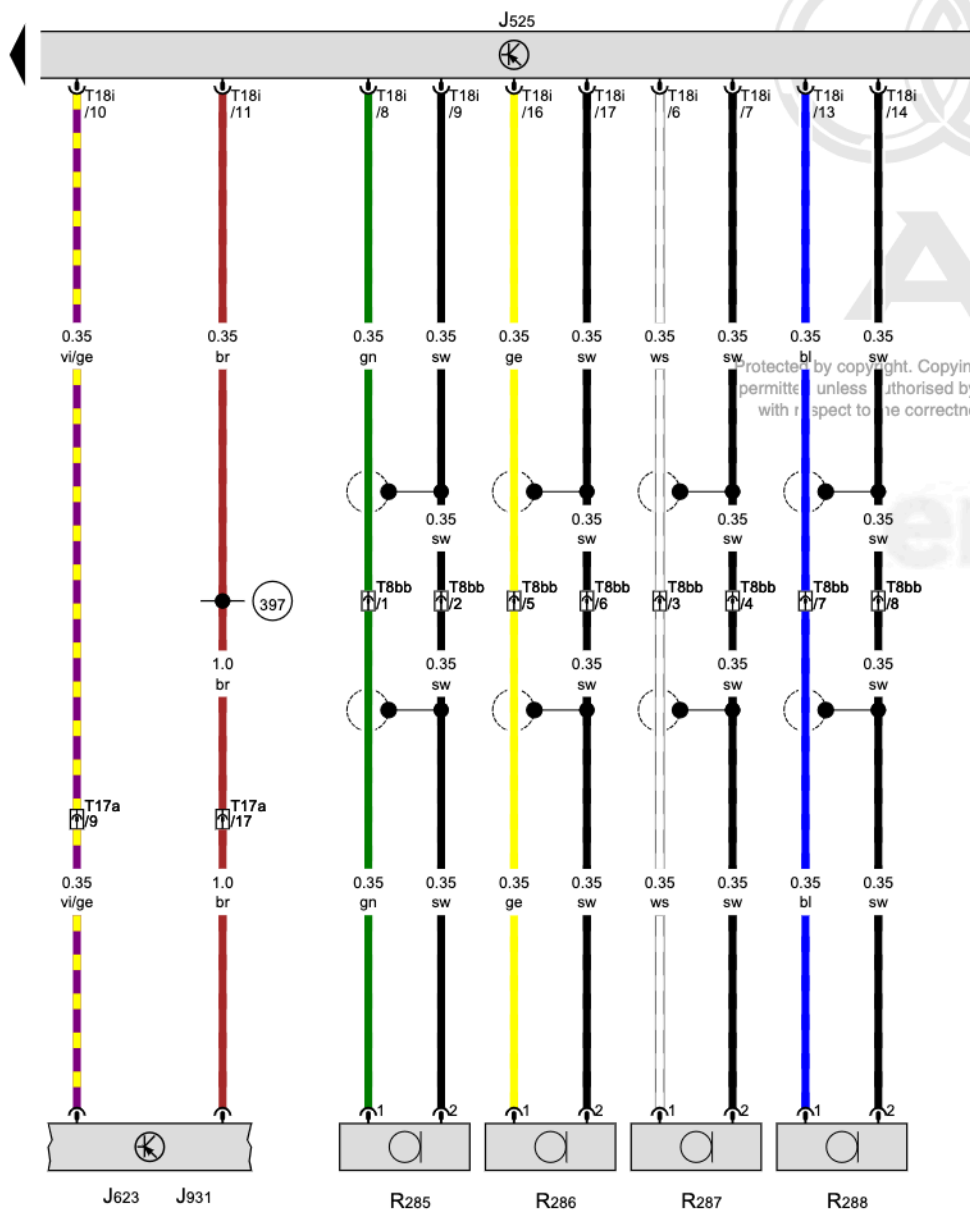

Digital sound system control module, Noise reduction microphone 1, Noise reduction microphone 3

- J525 Digital sound system control module
- J623 Engine control module
- J931 Subframe mount control module
- R285 Noise reduction microphone 1
- R286 Noise reduction microphone 2
- R287 Noise reduction microphone 3
- R288 Noise reduction microphone 4
- T8bb 8-pin connector, on the left C-pillar
- T17a 17-pin connector, Left plenum chamber E-box connector station, white
- T18i 18-pin connector

397 Ground connection 32 (in main wiring harness)

Refer to applicable engine wiring diagram

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink